

EXOS | EJA SERIES



EXOS 38



EXOS 48



EXOS 58



SUSTAINABLE DESIGN

- bluesign® approved main body fabrics
- GRS-certified recycled main body materials
- PFC/PFAS-free DWR



EJA 38



EJA 48



EJA 58

Welcome to Osprey. We pride ourselves on creating the most functional, durable and innovative carrying product for your adventures. Please refer to this owner's manual for information on product features, use, maintenance, customer service and warranty.

OWNER'S MANUAL



osprey.com

OVERVIEW



SHARED

1. Top pocket web loop attachment points
2. Removable floating lid with top- and under-lid zippered pockets
3. Integrated FlapJacket cover for lidless use
4. Internal hydration sleeve with center back hose port
5. Front stretch mesh pocket for stashing gear
6. Dual-access stretch mesh side pockets
7. Dual strappable side compression straps
8. Web lash points for attaching overloads
9. Removable sleeping pad straps
10. Dual ice axe loops with bungee tie-off
11. Dual zippered hipbelt pockets to keep essentials handy
12. Stow-on-the-Go trekking pole attachment
13. Sternum strap with integrated safety whistle

PRODUCT PROMISE

The AT crowd favorite—the Exos/Eja are high performance ultra-light backpacking packs providing category leading carry comfort and ventilation.

MAIN FABRIC

bluesign® approved recycled 100D high tenacity nylon ripstop, PFC/PFAS-free DWR

ACCENT

bluesign® approved recycled 400D high tenacity nylon, PFC/PFAS-free DWR

BOTTOM

bluesign® approved recycled 100D high tenacity nylon ripstop, PFC/PFAS-free DWR



OVERVIEW

EXOS 38 MEN'S

SPECS	S/M	L/XL
Cubic Inches	2319	2502
Liters	38	41
Pounds	2.63	2.73
Kilograms	1.19	1.24
Inches	30h x 13w x 12d in.	32h x 13w x 12d in.
Centimeters	75h x 33w x 30d cm.	80h x 33w x 30d cm.
LOAD RANGE	20-25 lbs. 9-11 kg	20-25 lbs. 9-11 kg
ADD-ON	Reservoir 3L Raincover M	Reservoir 3L Raincover M



EXOS 48 MEN'S

SPECS	S/M	L/XL
Cubic Inches	2929	3112
Liters	48	51
Pounds	2.84	2.94
Kilograms	1.29	1.33
Inches	30h x 14w x 12d in.	31h x 16w x 13d in.
Centimeters	75h x 36w x 30d cm.	79h x 40w x 32d cm.
LOAD RANGE	25-30 lb 11-14 kg	25-30 lb 11-14 kg
ADD-ON	Reservoir 3L Raincover M	Reservoir 3L Raincover M



EXOS 58 MEN'S

SPECS	S/M	L/XL
Cubic Inches	3539	3722
Liters	58	61
Pounds	2.91	3.00
Kilograms	1.32	1.36
Inches	30h x 15w x 13d in.	32h x 15w x 13d in.
Centimeters	77h x 37w x 33d cm.	82h x 37w x 33d cm.
LOAD RANGE	30-35 lb 14-16 kg	30-35 lb 14-16 kg
ADD-ON	Reservoir 3L Raincover L	Reservoir 3L Raincover L



OVERVIEW

EJA 38 WOMEN'S

SPECS	WXS/S	WM/L
Cubic Inches	2136	2319
Liters	35	38
Pounds	2.56	2.60
Kilograms	1.16	1.20
Inches	28h x 13w x 12d in.	30h x 13w x 12d in.
Centimeters	70h x 33w x 30d cm.	75h x 33w x 30d cm.
LOAD RANGE	20-25 lb 9-11 kg	20-25 lb 9-11 kg
ADD-ON	Reservoir 3L Raincover M	Reservoir 3L Raincover M



EJA 48 WOMEN'S

SPECS	WXS/S	WM/L
Cubic Inches	2746	2929
Liters	45	48
Pounds	2.75	2.84
Kilograms	1.25	1.29
Inches	28h x 14w x 12d in.	30h x 14w x 12d in.
Centimeters	70h x 36w x 30d cm.	75h x 36w x 30d cm.
LOAD RANGE	25-30 lb 11-14 kg	25-30 lb 11-14 kg
ADD-ON	Reservoir 3L Raincover M	Reservoir 3L Raincover M



EJA 58 WOMEN'S

SPECS	WXS/S	WM/L
Cubic Inches	3356	3539
Liters	55	58
Pounds	2.81	2.90
Kilograms	1.27	1.32
Inches	28h x 15w x 13d in.	30h x 15w x 13d in.
Centimeters	71h x 37w x 33d cm.	76h x 37w x 33d cm.
LOAD RANGE	30-35 lb 14-16 kg	30-35 lb 14-16 kg
ADD-ON	Reservoir 3L Raincover M	Reservoir 3L Raincover M



CARRY



EXOFORM HARNESS

EXOFORM HIPBELT

ULTRALIGHT AIRSPEED® SUSPENSION



ULTRALIGHT AIRSPEED® SUSPENSION

- + Injection-molded ladder adjustment system provides 4" of torso adjustability
- + Two size per gender design ensures perfect fit and allows for quick, easy adjustment
- + Stronger mesh and reduced seam design provides increased reliability for rigorous thru-hike usage
- + 4 mm powder coated LightWire frame

EXOFORM HARNESS

- + Seamless layered mesh provides improved comfort and cushioning
- + 15 mm adjustable slide sternum strap

EXOFORM HIPBELT

- + Zippered hipbelt pockets provide secure and accessible storage for on-trail essentials
- + Extended hipbelt shape increases carry comfort
- + ErgoPull closure provides leverage to ensure snug fit and optimal load transfer

SIZING / FIT

EXOS — MEN'S SIZING

S/M	17-20.5" / 43-52 cm
L/XL	19.5-23" / 49-58.9 cm



EJA — WOMEN'S SIZING

WXS/S	13.5-17" / 34-43 cm
WM/L	16-19.5" / 40.5-49 cm




WOMEN'S SPECIFIC FIT

- + The unique suspended mesh located on the shoulders, backpanel, lumbar and hipbelt contour to a wide variety of body shapes and sizes to create a custom fit for your body.
- + The pack shape is narrower and deeper allowing greater freedom of movement and increasing stabilization by lowering the position of the load to a woman's center of gravity.
- + The shoulder harness is designed with different curves to create an anatomical fit for a woman's neck, shoulders and chest.
- + Women's hips are conically shaped with a larger difference between the waist and hip measurements. The hipbelts are shaped and angled to accommodate this difference which allows a more comfortable load transfer and support.

SIZING / FIT

CÓMO MEDIR TU ESPALDA PARA TU MOCHILA

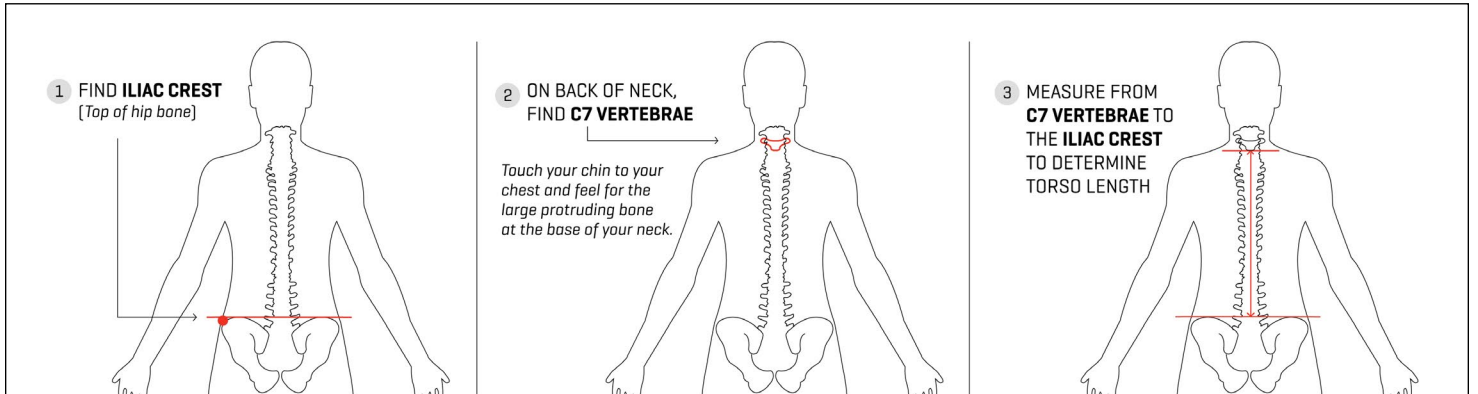

PACK FIT INSTRUCTIONS



1 POSITION THE PACK

Completely loosen the pack's hipbelt, harness and load-lifter straps. Load the pack with 10-20 lbs./ 4-9 kg. of gear.

Put the pack on and make sure the hipbelt is centered and rests over the hipbone. The hipbelt padding should sit halfway above/below the hipbone.



2 BUCKLE HIPBELT

Buckle and tighten the hipbelt evenly using Osprey's cross-body ErgoPull.

The padding of the hipbelt should wrap around the hips with approximately 1-3 in./2.5-6 cm. of webbing between the buckle and the hipbelt when tightened.



3 HIPBELT ADJUSTMENT

If the hipbelt is too large and "tops out" or does not offer the preferred amount of coverage, the customer may need a different pack size, model or adjustment (Fit-on-the-Fly hipbelt imaged).



4 TIGHTEN SHOULDER STRAP

Tighten the shoulder harness straps by pulling them down and back.

5 TIGHTEN LOAD LIFTERS

Tightening the load lifters will pull the pack close to the body and help stabilize the load.

If the torso length on the pack is adjusted correctly, the load lifters will sit between a 30- to 60-degree angle and align naturally with the shoulder straps.

PACK FIT INSTRUCTIONS (CONTINUED)




6 CHECK TORSO LENGTH

Locate the harness yoke – this is where the harness straps come together near the base of the user's neck. Locate the C7 vertebra – the large protruding bone at the base of the neck. The yoke should be 1 in./2.5 cm. - 2 in./5 cm. below the C7 vertebra.



7 ADJUSTABLE HARNESS (TORSO LENGTH)

- a Identify the two injection-molded adjustment ladders, which are located at the top corners of the tensioned mesh backpanel.
 - a. Each adjustment ladder should have four cutouts. The pack harness will pass through one of these cutouts on each ladder, ending in a plastic harness toggle, which sets the torso length.
- b To set the torso length to a different option, reach behind the adjustment ladder on both sides and lever the harness toggles until they are fully extended and straight, allowing them to pass through the ladder cutout. Once done on both sides, the harness should be free to slide up and down the LightWire frame.
- c Slide the harness up or down along the LightWire frame to the appropriate torso length and re-insert the plastic harness toggles, curved side first, fully into the matching ladder cutout on both sides.
- d Fully inserted, make sure the plastic harness toggle has been securely captured by the adjustment ladder and, under tension, is pulled up flat behind the backpanel. This ensures the toggle won't come out under weight and your torso adjustment is set.

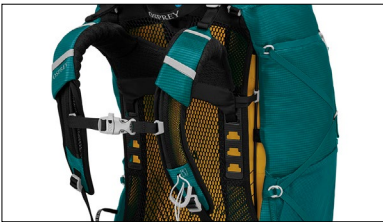

8 STERNUM STRAP

Ajusta la correa para el pecho a aproximadamente 2"/5 cm por debajo de la clavícula; abrocha y aprieta para tensar.

FEATURES



TOP LID WEB LOOP ATTACHMENT POINTS

Top lid and front panel attachment points can be used to secure additional gear externally.



DUAL ACCESS STRETCH MESH SIDE POCKETS WITH INSIDEOUT COMPRESSION STRAPS

Dual access side stretch mesh pockets store smaller items and provide access when wearing the pack. Items can be inserted from the top or side.



REMOVABLE FLOATING LID WITH TOP AND UNDER-LID ZIPPERED POCKETS

Dual upper side compression straps with quick release buckles compress and stabilize loads for optimal carry and can be used to secure items to side of pack.



DUAL, REMOVABLE SIDE COMPRESSION STRAPS

Removable side compression straps reduce weight.

- Unthread the webbing from the upper and lower ladder lock.
- Unthread the webbing from the three plastic side compression attachment points.
- To replace, reverse the steps.



INTEGRATED FLAPJACKET COVER FOR LIDLESS USE

When using pack without top lid, unfold FlapJacket buckles and attach to the front vertical compression straps.



STERNUM STRAP WITH INTEGRATED SAFETY WHISTLE

FEATURES



STOW-ON-THE-GO TREKKING POLE ATTACHMENT

Osprey's Stow-on-the-Go trekking pole attachment is designed to quickly attach and carry trekking poles while wearing a pack.

- Locate the elasticized loop on the lower left side of pack. While pulling the loop out from the pack, insert the basket end of the trekking poles into the loop.
- On the left harness strap locate the trekking pole icon. Pull up on the cord to open, place pole handles in the loop and tighten with the cord lock to secure.
- Reverse these steps to remove the trekking poles.



ICE AXE ATTACHMENT WITH BUNGEE TIE-OFF

The ice tool loops and bungee tie-offs provide secure tool attachment.

- Slide the tool shaft through the top of the ice tool loop and flip the shaft up toward the top of the pack.
- Loosen the bungee cord lock and route the tool handle through the bungee. Tighten the cord lock nesting it into the Y-clip to secure the tool into place.
- Reverse to remove.



ACCESSORY CORD ATTACHMENT POINTS

Provide additional external gear attachment options.




FRONT STRETCH MESH POCKET FOR STASHING GEAR

Front stretch mesh pocket stores gear you need quick access to or holds wet gear to dry.



REMOVABLE SLEEPING PAD STRAPS

Removable sleeping pad straps for external attachment.

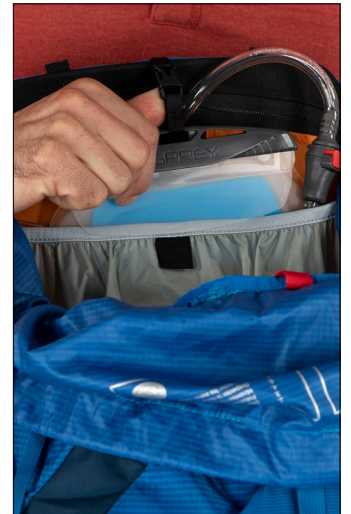

INTERNAL RESERVOIR SLEEVE

Place reservoir inside sleeve to help ensure proper pack weight distribution. Clip reservoir to buckled loop to keep upright.



For more information on this product and others, pack care, how to pack your pack, our lifetime guarantee, or to contact Osprey Customer Service, visit osprey.com.

OWNER'S MANUAL



osprey.com